




# Kodak Easyshare C813 Lens Replacement

Replace the Lens in your Kodak Easyshare C813.

Written By: Susan Marano

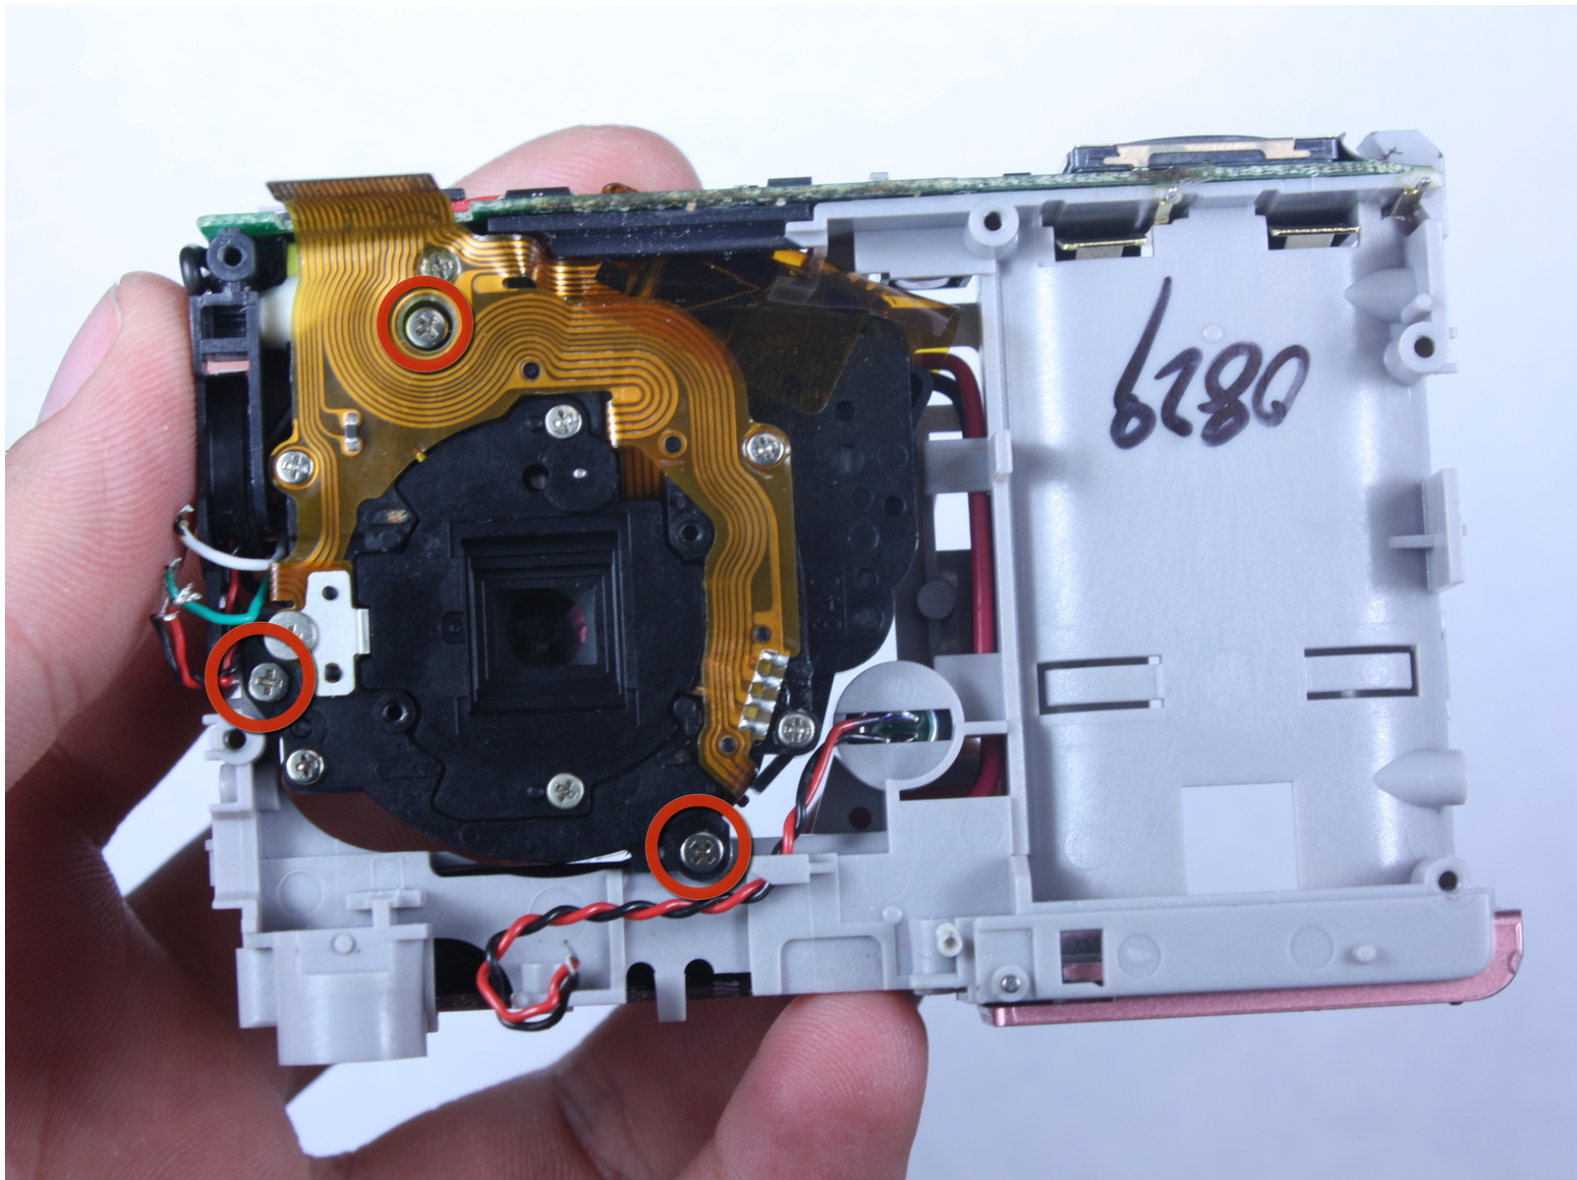

## INTRODUCTION

This guide demonstrates how to replace the lens.

---

### TOOLS:

- [Anti-Static Wrist Strap](#) (1)
  - [Desoldering Braid](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Soldering Workstation](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

## Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.



## Step 3 — Back Cover



- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

## Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.




## Step 5



- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

## Step 6

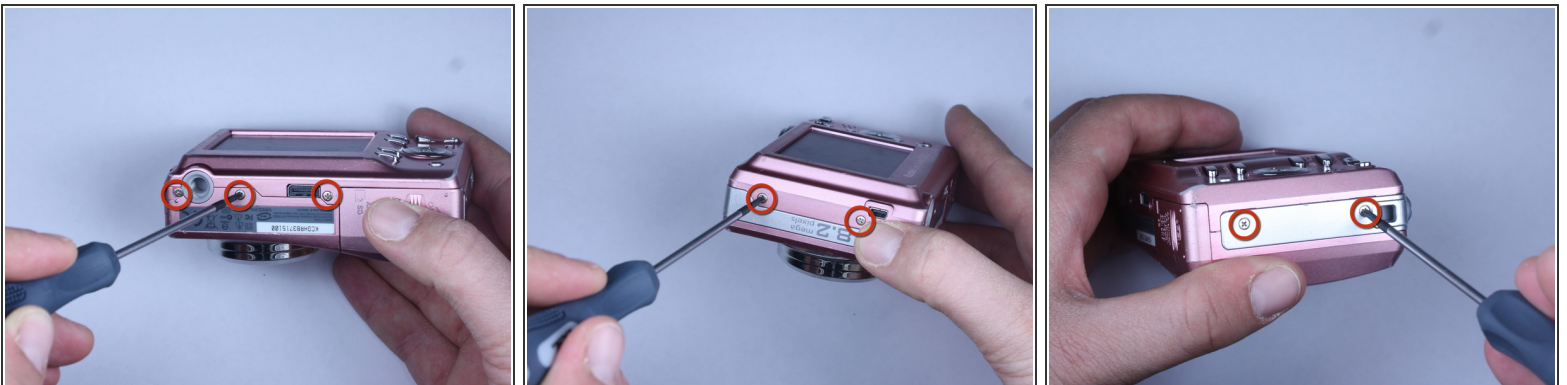

- Remove all 7 screws:
  - Hold the camera firmly with one hand so that you can still see a screw.
  - Place the Philips 00([Found here](#))screwdriver into the screw.
  - Turn the screwdriver to the left until it is free.
  - Repeat for the remaining screws.

## Step 7



- Use [plastic opening tools](#) to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
  - The first two are near the words "3X Optical Zoom".
  - The third is near the shutter button.


## Step 8



- Gently pull apart the back cover from the rest of the camera.
  - Make sure there are no more screws or tabs keeping the cover on.
  - Use the plastic opening tool to separate any sides still closely connected.





## Step 9 — Front Cover

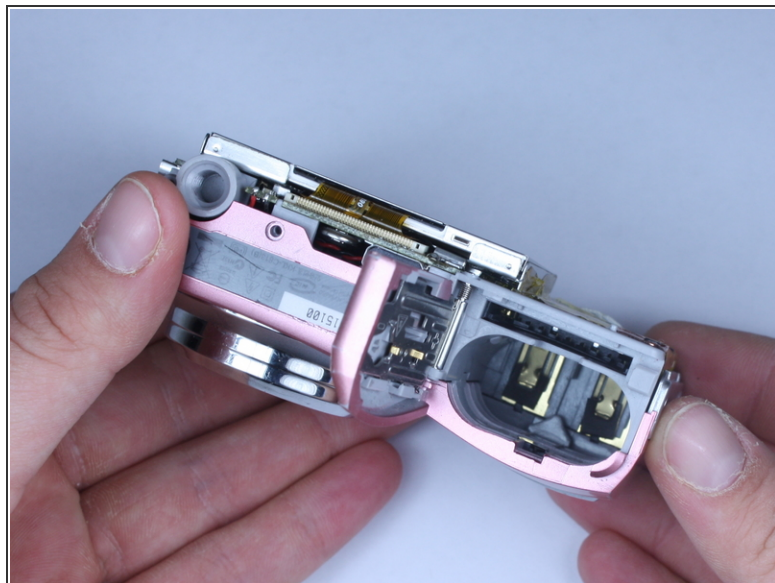

- Open the battery door.
  - Press thumb firmly on battery door and slide it in the direction of the arrow.
  - Lift thumb allowing the door to swing open.

## Step 10

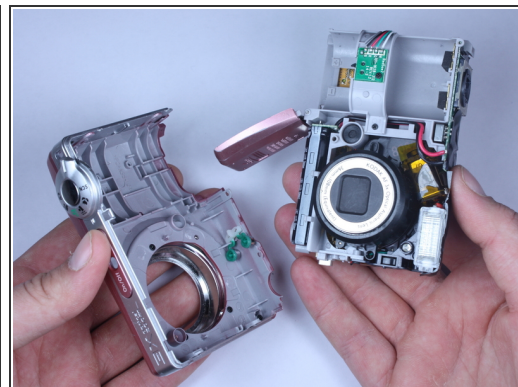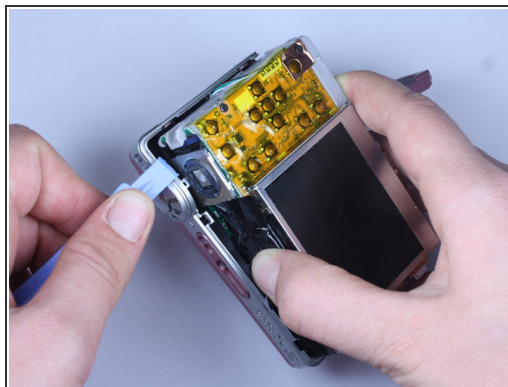

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.






## Step 11



⚠ Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.

- To discharge the capacitor follow this [guide](#).

## Step 12 — LCD

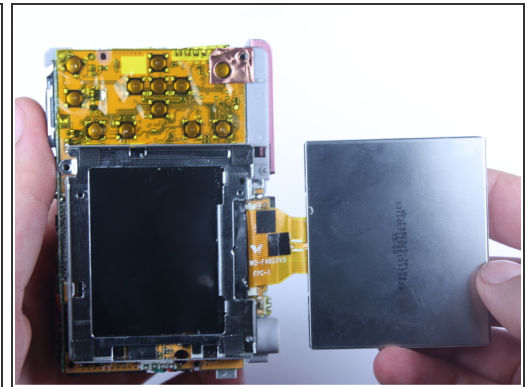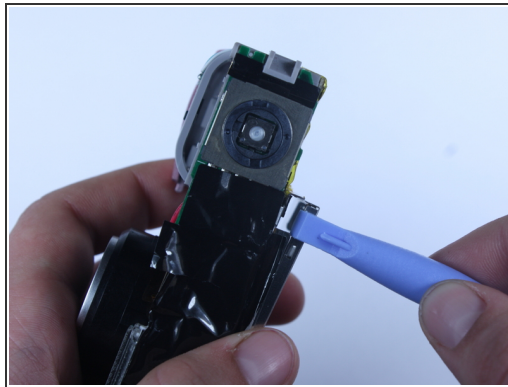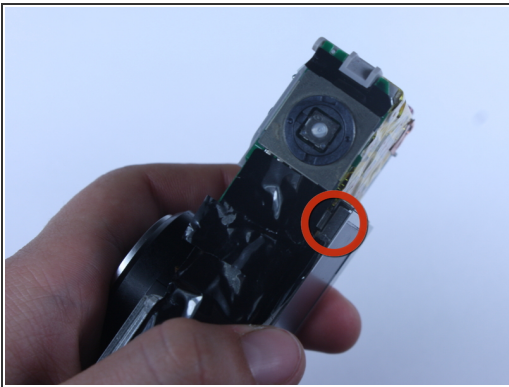

ⓘ Once the front cover is removed, the battery door maybe closed for convenience.

- Locate the exposed portion of the LCD screen.
- Use a wedge to free the LCD screen from the metal housing.




⚠ Do not pull the screen away completely, it is still attached to the logic board via the yellow cable.

## Step 13



- Remove the screw at the upper right corner of the metal housing.

## Step 14

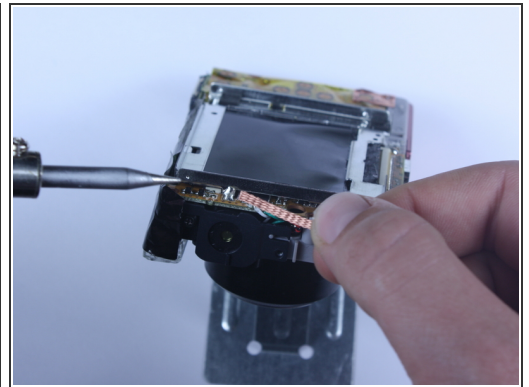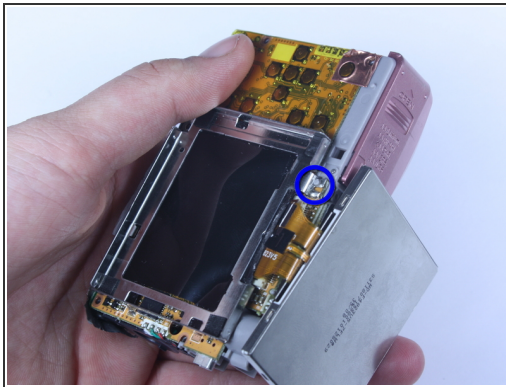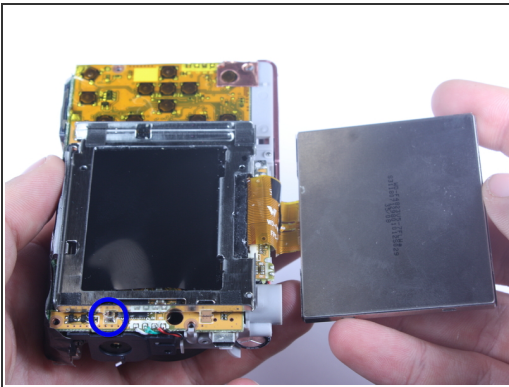

- Locate the 2 solder joints holding down the metal housing.
- Remove the solder.
  - Place wick on solder.
  - Place solder iron on wick
- ❗ The wick should be sandwiched between the iron and the solder.



## Step 15



- Peel back the black tape from the metal housing.
- Lift the metal housing from the left so that it hinges on its right side.
- ❗ The metal housing is still loosely attached on its right side.


## Step 16



- Locate black tab holding the LCD screen connector in the port.
- Use wedge or fingernail to lift the black tab.
- Pull the the LCD screen connector out of the port.




## Step 17 — Logic Board

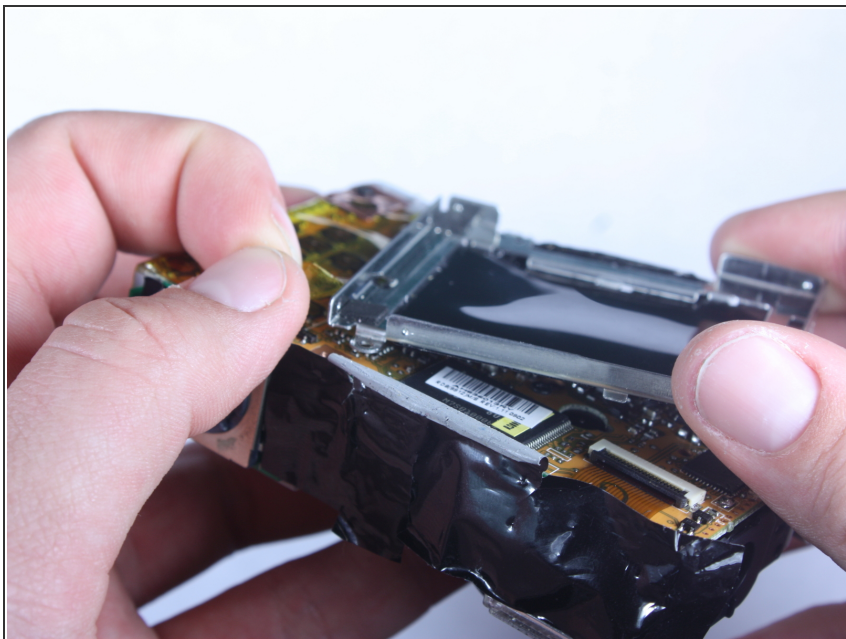

- Remove the metal housing from the logic board by carefully peeling the yellow tape off of the metal housing.



## Step 18

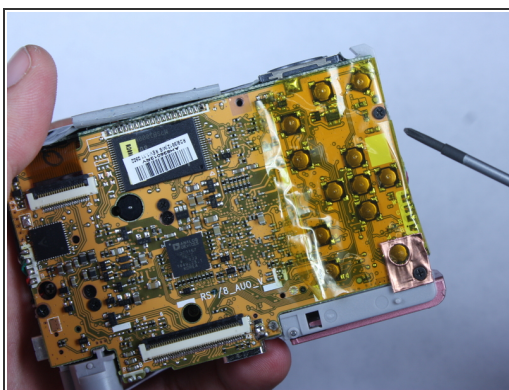

- Locate the 2 screws on the yellow tape.
- Remove the 2 screws.
- Remove the yellow tape.






## Step 19

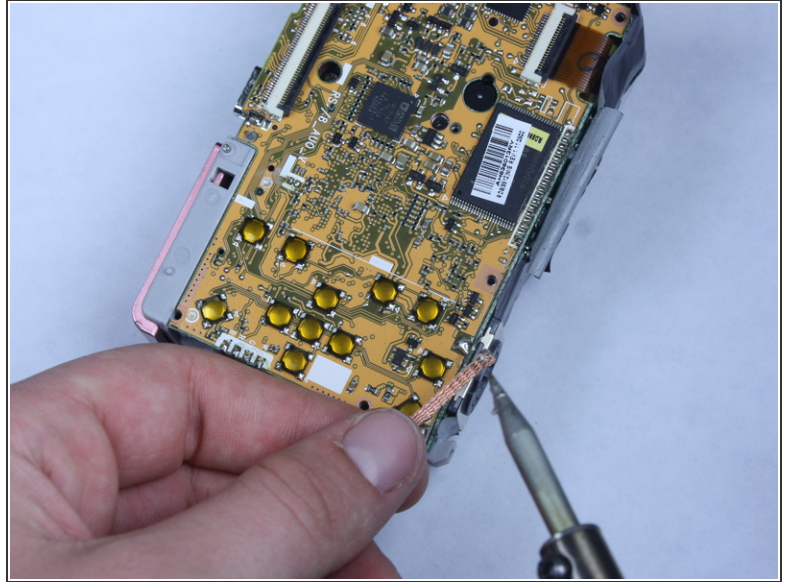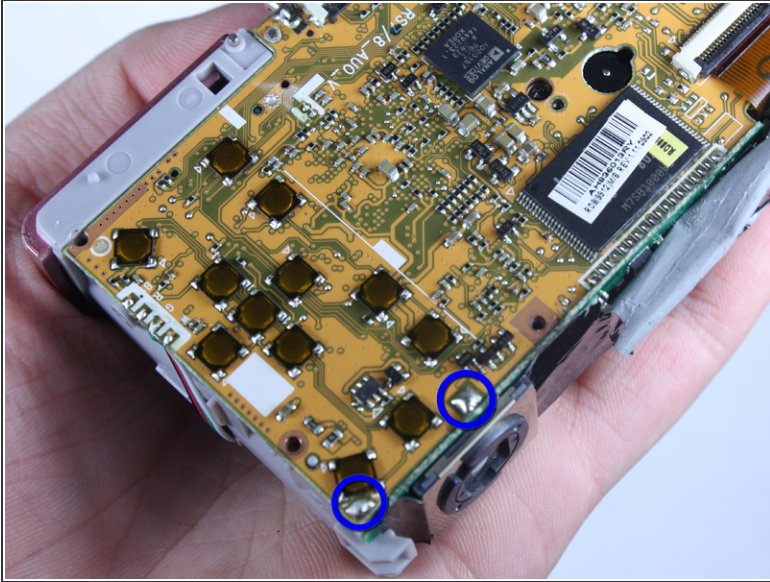

- Locate the 2 solder joints near the shutter button.
- Remove the solder on both joints with the wick and soldering iron in the same manner as Step 11.


## Step 20

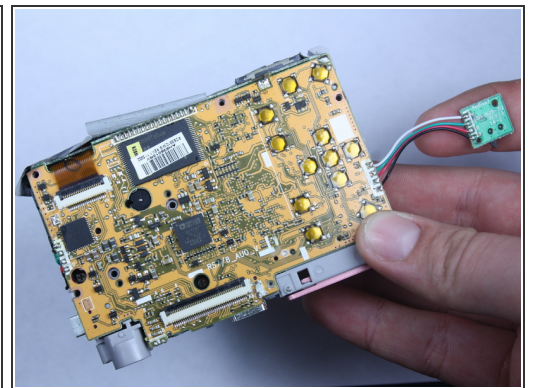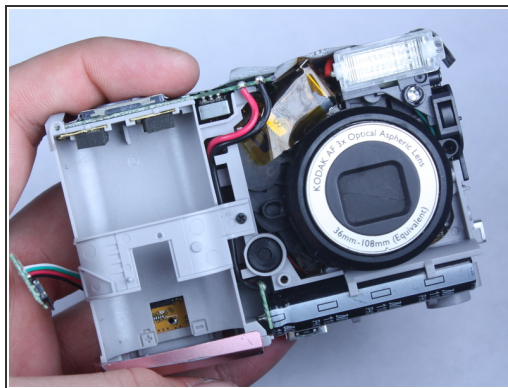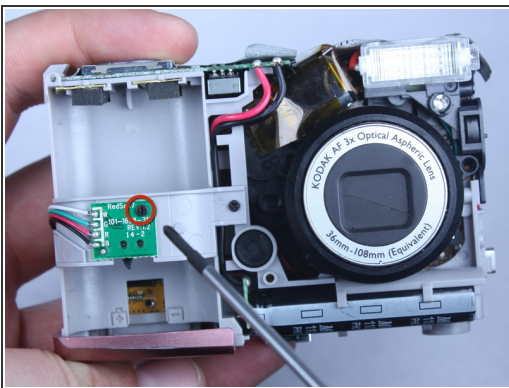

- Turn the camera over.
  - Remove the screw holding the small green board.
  - Lift the small green board.
- ⚠ The small green board is still attached to the logic board via wires.





## Step 21

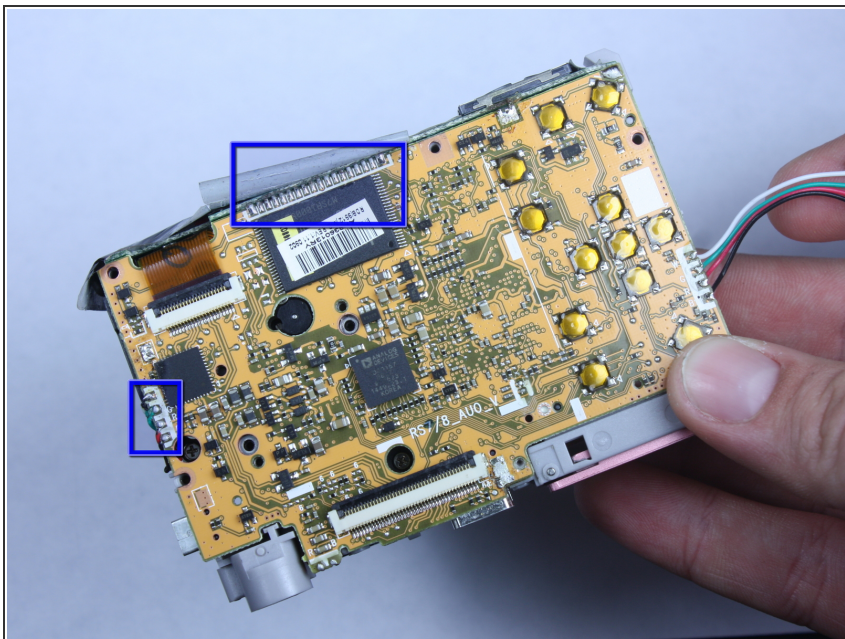

- Desolder the remaining 20 solder joints connecting the logic board to the camera.




## Step 22

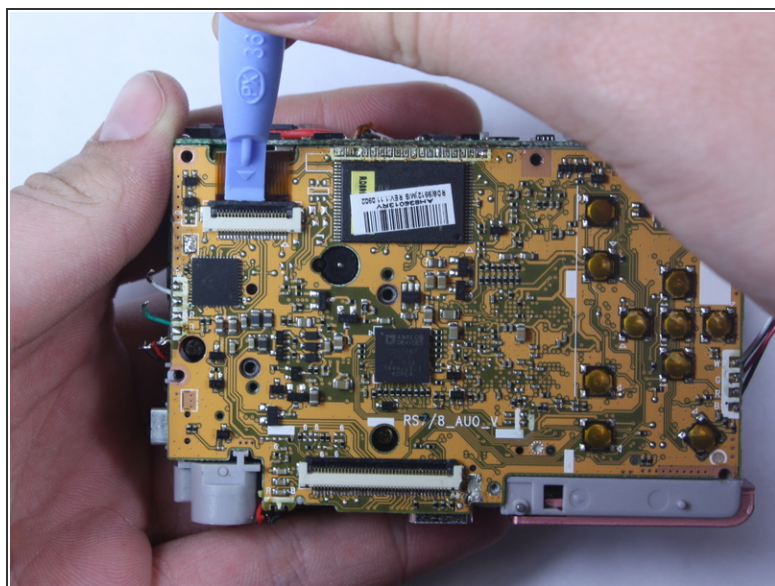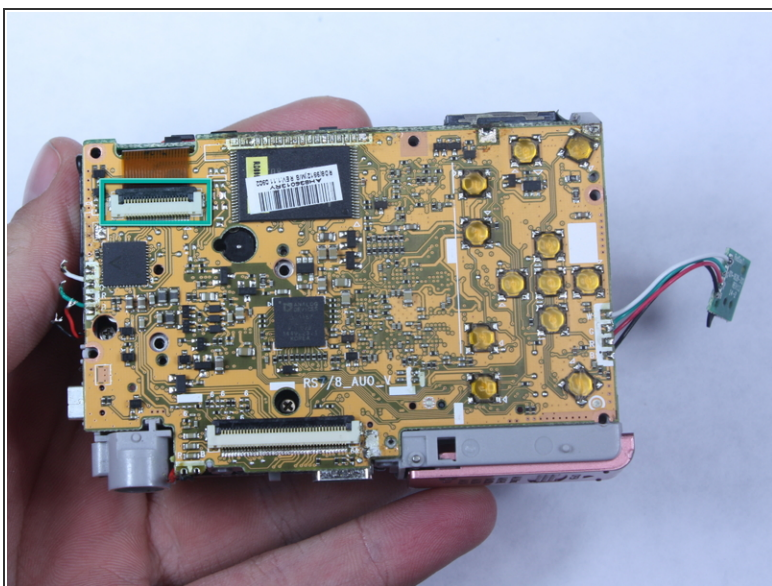

- Locate the black tab holding the yellow cable in place.
- Use a plastic opening tool or fingernail to lift the black tab.
- Pull the yellow cable from the port.






## Step 23

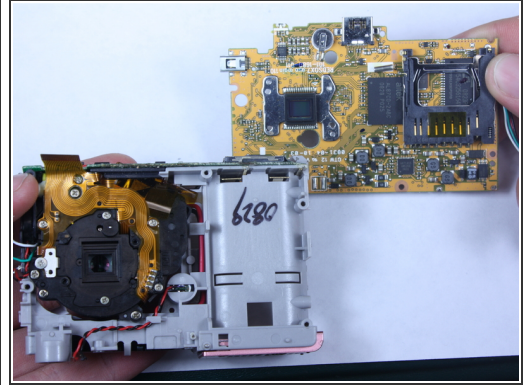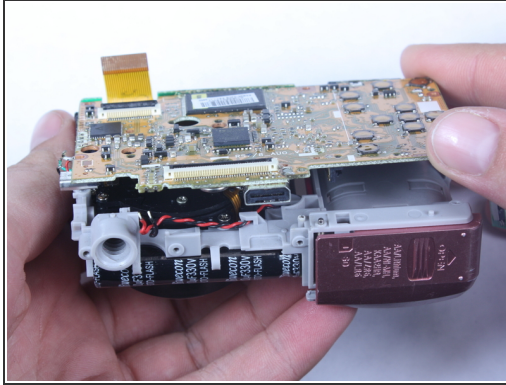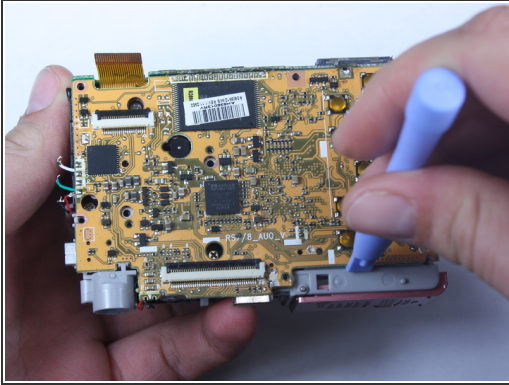

- Use a plastic opening tool to lift the board from the camera.
- Continue to remove the board completely.

## Step 24 — Lens

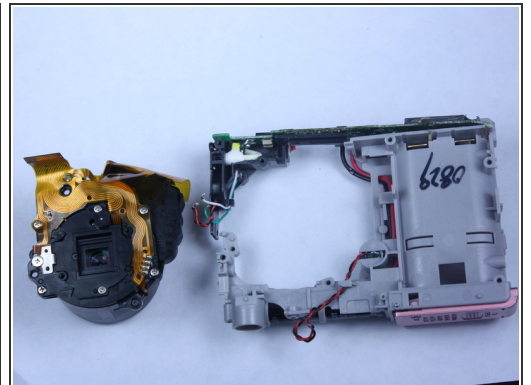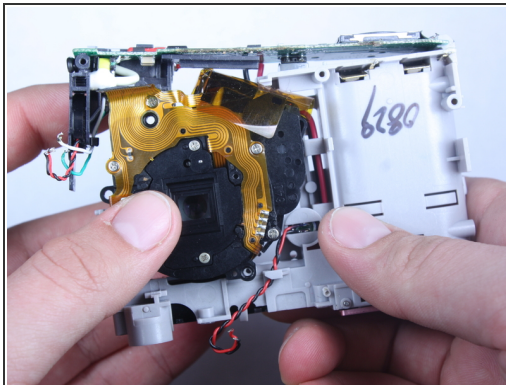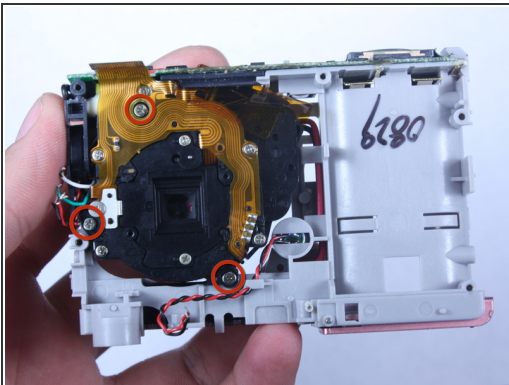

- Remove the 3 screws securing the lens to the camera.
- Gently remove the lens from the remaining casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 09:18:58 PM.